

# BEDGEBURY & KINSLEY FRENCH PATIO DOORSET FITTING THE COVER SPLINE


Before you start, ensure that your doors are fitted in the frame and correctly aligned as per the instructions.

Fitting your cover splines: (Rear spline first)


1. Fit plastic end caps to rear cover spline and screw in place.
2. Apply adhesive to face marked by 'Detail B'. Apply liberally to entire length of strip.
3. Align spline against slave door (no lock system) as shown by 'Detail B'.
4. Position the spline vertically such that there is an even gap between the top and bottom of the frame when the doors are closed.
5. Clamp the spline in place and leave for the time recommended by your waterproof adhesive.
6. Pin the cover spline in position with low profile tacks / pin gun. These should be inserted at a minimum of 100mm intervals from top to bottom of the spline. *Stainless or non-corrosive pins should be used for this.*
7. Fill the pin holes with an appropriate outdoor filler and cover this with a matched RAL paint or stain.
8. Fit the provided weatherstrip into the groove. Match the orientation from 'Detail B'.

Repeat this for the front spline, ignoring step 1.

The two cover splines:

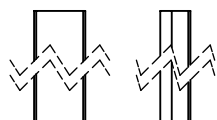


Rear Cover Spline  
(with 2x end caps)

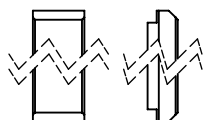

Front Cover Spline  
(angled edges)

Your doorset:

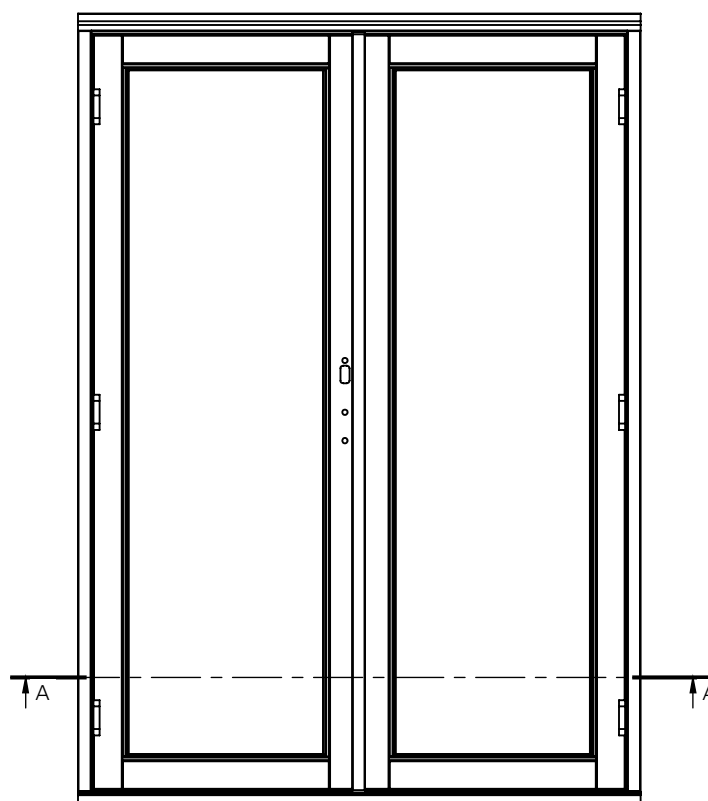

SECTION A-A

