

Steel Security Doorset

FITTING AND FIXING GUIDELINES

1 Preparation

Remove the packaging to locate the keys placed inside the head of the frame. Use the 2 loose fitter's keys to install the door.


The remaining 6 keys, including 1 gold key (packaged in plastic) is the set for the doorset.

After installation of the doorset use the gold key to reset the lock allowing the use of the 5 remaining keys and making the 2 fitters keys unusable.

The gold key should NOT be used as an "every day" key but should be kept in a safe place as the "master key".



2 Installing the frame

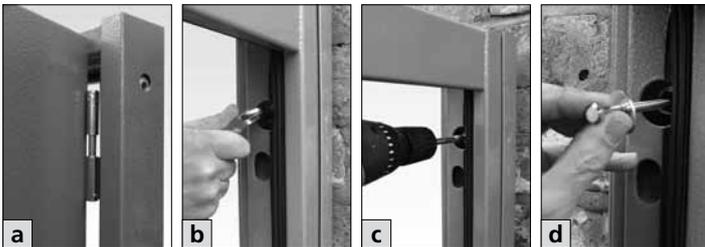

Stand the door and frame vertically.

- a: Open the door 90 degrees and lift off the frame.
- b: Stand the frame in the opening and insert a 12mm Allen key (not supplied) into each side jacking point and wind out until each side gently touches the opening.
IMPORTANT: The door will NOT swing or lock correctly if the frame is not square and plumb in the opening.
- c: Using a 10mm drill bit make pilot holes to each jacking point.
- d: Secure the frame through the centre of each jacking point by using 10mm fixings (not supplied).

3 Installing the door

Re-hang the door onto the frame and close the door, the clearance around the head and door jambs should be parallel, if not the door may not close or lock successfully.

To adjust, un-tighten the specific fixings and make any adjustments using suitable shims or packers before re-tightening.



4 Fitting the hardware

Fit the handles, lock cover and cylinder, close the door and try the key in both sides of the door to check it will lock and the door closes smoothly.



CAUTION



SAFETY: This product needs to be installed by a competent tradesperson with assistance. Two people are required to carry out the installation, as some components are heavy. The opening **MUST** be capable of carrying the load of the doorset in all conditions.