


OPEN SOFFIT DETAIL

FITTING & FIXING GUIDELINES



CAUTION SAFETY: This product needs to be installed by a competent tradesperson with assistance. Two people are required to carry out the installation, as some components are heavy. The weight of this product exceeds 25kg when assembled.

1 Fixing the batten

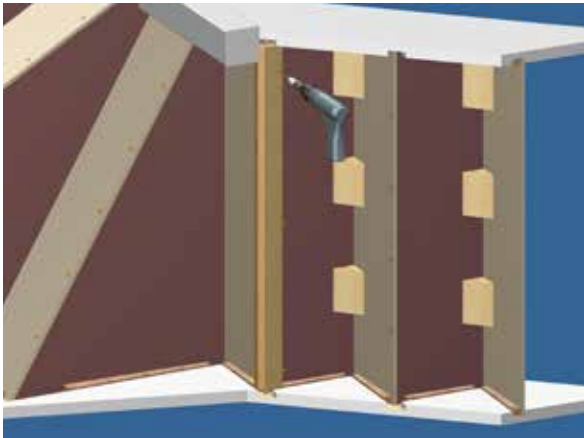


1. Screw the batten to the bottom of the tread.




2. Screw the batten to the tread and riser intersection.

2 Fixing the plasterboards

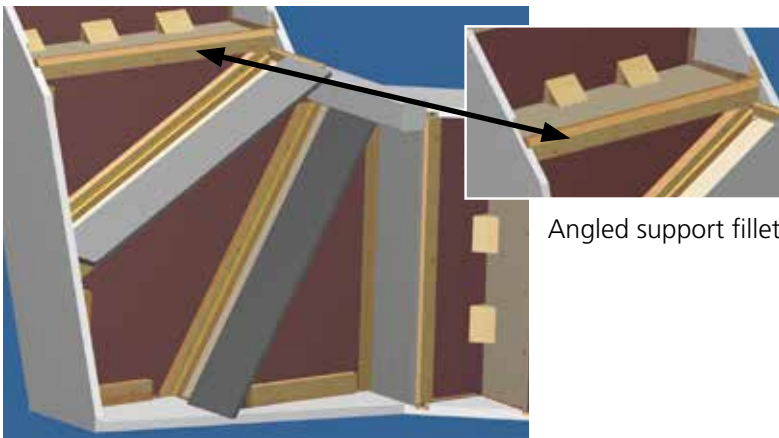


Angled support fillet

1. Cut and fit the plasterboard to the risers and treads.

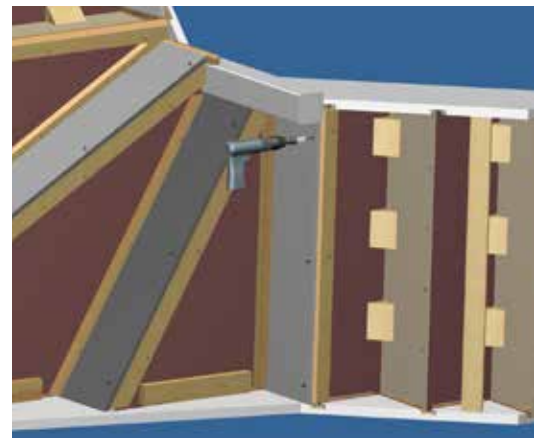

2. Screw the plasterboard to the battens.

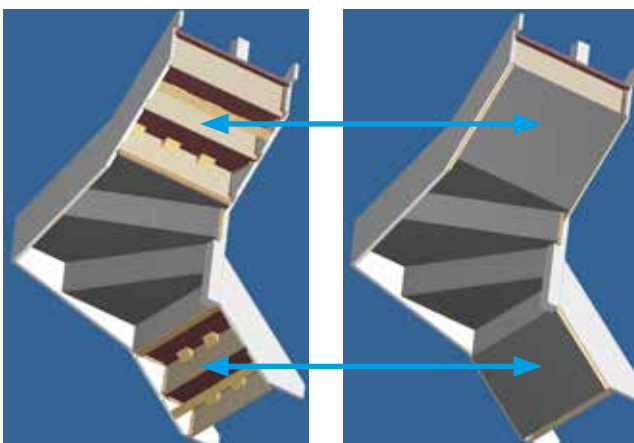

3. On the straight trunks fit the plasterboard to the soffit as per illustration.

