



making  
moving  
easier

with  
JELD-WEN

For further information  
on our full range of  
stairs, windows and  
doors visit  
[www.jeld-wen.co.uk](http://www.jeld-wen.co.uk)



Balustrade  
system that  
allows free  
movement



JELD-WEN UK Ltd  
Snow Hill, Melton Mowbray  
Leicester, LE13 1PD  
T. 01664 484 618 F. 01664 484 586  
E. [marketing@jeld-wen.co.uk](mailto:marketing@jeld-wen.co.uk)  
E. [customer-services@jeld-wen.co.uk](mailto:customer-services@jeld-wen.co.uk)

visit us at [www.jeld-wen.co.uk](http://www.jeld-wen.co.uk)

# JELD-WEN<sup>®</sup>

STAIRS

MFD65 ISSUE A OCT 06

**DEMOUNTABLE BALUSTRADE SYSTEM  
FITTING INSTRUCTIONS & USER GUIDE**

You have purchased a JELD-WEN stair fitted with a revolutionary demountable balustrade system.

This guide will help you to utilise the system giving you ease of access to the stair well.

## EASY TO FOLLOW INSTRUCTIONS FOR DEMOUNTABLE BALUSTRADE SYSTEM

1

PREPARE:  
you will need a screwdriver (Phillips & flathead) and spanner



2

Remove the cover caps from the newel to expose fitting bolt for the handrail



3

Unscrew the bolt using your screwdriver



4

Remove the bolt and keep safely



5

After completing this task at both ends of the balustrade, unscrew the floor rail



6

Once all bolts are removed and floor rail unscrewed carefully lift off the assembled balustrade



7

This will leave behind the end spindles, these can be simply lifted off their dowel pegs



8

This now leaves the newel tops to be removed, remove cover caps from rear of newel to expose fitting



9

Holding the newel top, loosen the nut and remove newel top




10

To reassemble follow instructions in reverse

11

Ensure the handrail bolt locates in the end cap correctly otherwise the hand rail will not relocate squarely

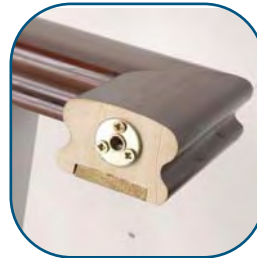

12

Also carefully re-locate the loose end spindles into the groove on the underside of the hand rail assembly

**CAUTION** the demountable balustrade option should only be used as a temporary measure for the moving of furniture and other such large items, the stairwell should be protected to prevent accidents

You should carry out your own risk assessment before using this facility to ensure safety at all times.